Pre-Hung Pine Doors

Assemble in minutes, in 2 easy steps

Machined with Precision and High Quality, for a perfect and simple assembly

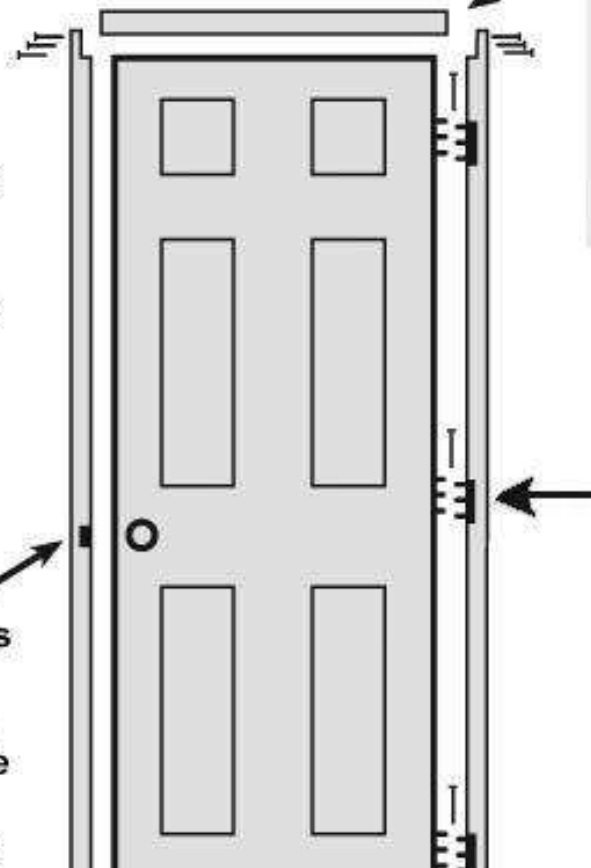

I

Attach the header to the side jambs with the supplied 3 screws per side and into the predrilled holes.

Once door frame is square, just install into opening.

II

Slide the 3 hinges pins back into position after interlocking the door and jamb hinges parts.

After jambs and door assembly, striker hole will align with strike